

NEW DIGITAL FIBER SENSOR

FX-100_{SERIES}





Bringing digital fiber sensors closer



New possibilities with digital fiber sensors. The **FX** series is a round **100** for success.

Easy to read, multipurpose, and at an economical price.

The **FX** series has been designed to be what customers want it to be.

Take a step into the new world that starts with '100'.

Easy to read

The digital dual-display shines out in the workplace!


The digital dual-display allows you to check both the threshold value and incident light intensity at the same time, and it also makes the procedures for setting the various values much easier. The threshold values can be adjusted simply by pressing the \square (UP) key or the \square (DOWN) key, so that the sensors can be used at the same sensitivity levels as analog control-type sensors. And of course a key lock function is also included.



General purpose


Commercially-available connectors are used so that lead time and spare part numbers can both be reduced.

The connectors used are commercially-available connectors, so that processing costs and lead time required for carrying out processing after purchase of the sensors can be greatly reduced. The same connection parts as the **DP-100** series of digital pressure sensors and the **PM-64** series of micro photoelectric sensors can be used.

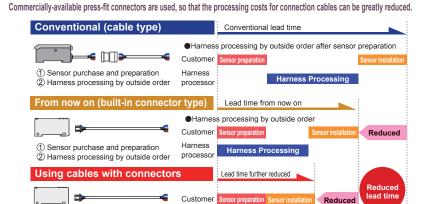




SUNX fiber sensor product lineup

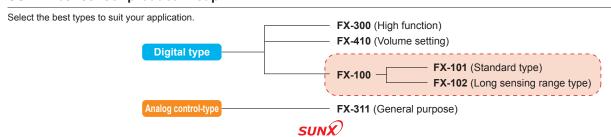



Designed in a 3-layer structure to accommodate basic settings through to advanced settings.

Setting details are divided into three levels for clearer operation, so that settings for normal operation are made in 'RUN mode', basic settings are made in 'SET mode', and advanced functions are set in 'PRO mode'. This makes setting operations much easier to understand and carry out.

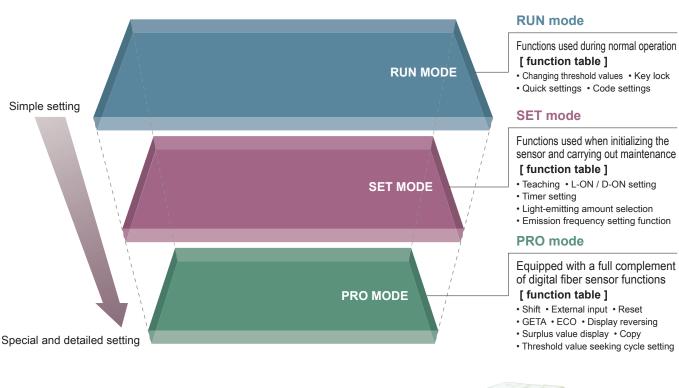

The same operating system is shared by the widely-acclaimed **DP-100** series of digital pressure sensors. The '**100**' is the indicator for easy handling.



Digital pressure sensor **DP-100** series

Easy for inexperienced operators to use, and experienced operators will still be satisfied too.

Introducing sensors with a full complement of functions



Changing threshold values

Key lock

Quick settings

Code settings

Quick code input function





Sensor settings can be made simply by selecting preset values.



Quick setting numbers (summary)

No. Output operation		Timer	
Dark-ON	OFF	None	
Dark-ON	ON	None	
Dark-ON	OFF	OFF-delay 10 ms	
Dark-ON	ON	OFF-delay 10 ms	
Light-ON	ON	ON-delay 40 ms	
Light-ON	OFF	ON-delay 40 ms	
Light-ON	ON	ON-delay 10 ms	
Light-ON	OFF	ON-delay 10 ms	
	Dark-ON Dark-ON Dark-ON Dark-ON Light-ON Light-ON Light-ON	Dark-ON OFF Dark-ON ON Dark-ON OFF Dark-ON ON Light-ON ON Light-ON OFF Light-ON ON	



Smooth support via telephone


Confirmation can be carried out smoothly via telephone by simply quoting numbers. This can be of great assistance when dealing with overseas customers.

Teaching using ON / OFF buttons



Simply press the ON button when an object is present and OFF when it is not. There is no need to switch settings or make judgments between Light-ON (1, 00) and Dark-ON (d_an).

<Setting example>

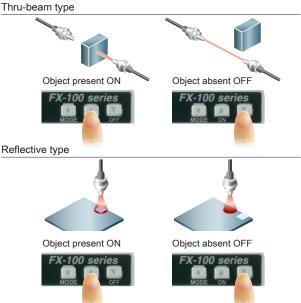

Limit teaching function

This carries out teaching and sets threshold values only when no object is present (when the incident light amount is stable). This is useful when sensing objects if there are other objects in the background and when sensing minute objects. Teaching can also be carried out using external input.

Light-emitting amount selection function



If the light receiving level becomes saturated when sensing over short distances or when sensing transparent objects or minute objects, the light emitting amount can be adjusted so that stable sensing can be provided without needing to change the response time.


Emission frequency setting function



FX-101 ☐: Interference prevention for up to 3 units **▼FX-102**: Interference prevention for up to 4 units

The emission frequencies can be set separately for each unit in order to avoid interference. The emitted light flashes while setting is in progress, so that you can see at a glance which fiber sensor is currently being set. In addition, this interference prevention is not done by using optical communication. This means that there is no need to place the amplifiers close together like there was before, and so the amplifiers can be set up apart from each other.

 $\mbox{\%}$ When the emission frequencies are changed, the response times will also change.

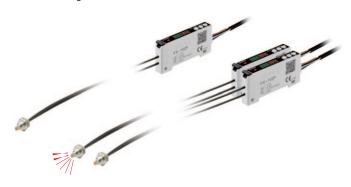












Threshold value seeking cycle setting GETA ECO Display reversing Surplus value display


Threshold value seeking cycle setting function

This function seeks changes in the light emitting amount resulting from changes in the environment over long periods (such as dust levels), so that the incident light intensity can be checked at desired intervals and the threshold values can be reset automatically.

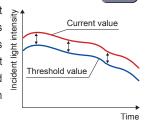


External input function

Settings such as emission halt, limit / auto teaching and ECO settings can be carried out via external input.



The functions and performance of a digital fiber sensor at an easily-affordable price!

SUNX digital-type sensors have never been more accessible than this. And they are ideal as replacement products for analog control types and teaching types also.

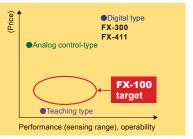



■ORDER GUIDE

Amplifiers

Allip	Ampiniers									
Туре		Appearance	Model No.	Emitting element	Output					
			FX-101 (Note 2)		NPN open-collector transistor					
	M8 plug-in connector type		FX-101-Z (Note 3)		NPN open-collector transistor					
rd type			FX-101P (Note 2)		PNP open-collector transistor					
Standard type	M8 plug-in connector type		FX-101P-Z (Note 3)	Red LED	PNP open-collector transistor					
	₽		FX-101-CC2		NPN open-collector transistor					
	Cable set (Note		FX-101P-CC2		PNP open-collector collector transistor					
		FX-102P CE um	FX-102 (Note 2)		NPN open-collector transistor					
type	M8 plug-in connector type		FX-102-Z (Note 3)		NPN open-collector transistor					
Long sensing range type			FX-102P (Note 2)		PNP open-collector transistor					
ı sensing	M8 plug-in connector type		FX-102P-Z (Note 3)		PNP open-collector transistor					
Long	Cable set (Note 1)		FX-102-CC2		NPN open-collector transistor					
	Cable set		FX-102P-CC2		PNP open-collector transistor					

Accessory

• CN-14A-C2 **/** Connector attached **** cable 2 m 6.562 ft

※Only include cable set type



Notes: 1) The connector attached cable CN-14A-C2 is supplied with the amplifier.

- 2) Make sure to use the optional connector attached cable CN-14A-C or the connector CN-14A.


 3) Make sure to use the optional M8 connector attached cable CN-24A-C or the connector CN-14A.

OPTIONS

Designation	Model No.	Description			
	CN-14A-C1	1 m 3.281 ft			
Connector	CN-14A-C2 (Note)	2 m 6.562 ft	0.02 mm ² 4-core cabtyre cable		
attached cable	CN-14A-C3	3 m 9.843 ft	Cable outer diameter: ϕ 3.7 mm ϕ 0.146 in		
	CN-14A-C5	5 m 16.404 ft			
M8 connector	CN-24A-C2	2 m 6.562 ft	For M8 plug-in connector type The connector on one end		
attached cable	CN-24A-C5	5 m 16.404 ft			
Connector	CN-14A	Set of 10 hous	ings and 40 contacts		
Protection cover	FC-FX-1	This protects t	he operating surfaces.		
Amplifier mounting bracket	MS-DIN-4	Mounting brac	ket for amplifier		
End plates	MS-DIN-E	When it moves depending on the way it is installed on a DIN rathese end plates ensure that all amplifiers are mounted together a secure and fully connected manner. Two pcs. per set			

Note: The connector attached cable **CN-14A-C2** is supplied with the cable set type **FX-10**□(**P**)-**CC2**.

M8 connector attached cable



Protection cover

• FC-FX-1



Amplifier mounting bracket

• MS-DIN-4




Connector attached cable

• CN-14A-C□



Connector

• CN-14A



SPECIFICATIONS

_			Standa	ird type	Long sensing range type		
		Туре		Cable set		Cable set	
	è	NPN output	FX-101 (-Z) (Note 4)	FX-101-CC2	FX-102 (-Z) (Note 4)	FX-102-CC2	
Iter	Model No.	PNP output	FX-101P (-Z) (Note 4)	FX-101P-CC2	FX-102P (- Z) (Note 4)	FX-102P-CC2	
Sup	oply voltage		, , , , ,	12 to 24 V DC ± 10 %	Ripple P-P 10 % or less		
Pov	wer consumption	on		on: 720 mW or less (Current cor 0 mW or less (Current consump			
Output			<npn output="" type=""> NPN open-collector transistor Maximum sink current:100 r Applied voltage: 30 V DC or Residual voltage: 1.5 V or le </npn>	less (between output and 0 V)	<pnp output="" type=""> PNP open-collector transistor Maximum source current: 100 mA Applied voltage: 30 V DC or less (between output and +V) Residual voltage: 1.5 V or less (at 100 mA source current) </pnp>		
	Output opera	tion		Selectable either Light-ON	or Dark-ON, at SET mode		
	Short-circuit p	orotection		Incorp	orated		
External input			Low: 0 to \pm 2 V DC	NPN non-contact input • Signal condition High: +8 V to + V DC or Open Low: 0 to +2 V DC (Source current 0.5 mA or less)) Open Ipprox.	
Response time			Emission frequency 0: 250 μ s or less Emission frequency 1: 450 μ s or less Emission frequency 2: 500 μ s or less Emission frequency 3: 600 μ s or less		Emission frequency 1: 2.5 ms or less Emission frequency 2: 2.8 ms or less Emission frequency 3: 3.2 ms or less Emission frequency 4: 5.0 ms or less		
Ser	nsitivity setting		2-level teaching / Limit teaching / Full-auto teaching				
Оре	eration indicato	or	Orange LED (lights up when the output is ON)				
Digi	ital display		4 digits (green) + 4 digits (red) LCD display				
Fine	e sensitivity adjus	stment function	Incorporated				
Tim	ner function		ON-delay / OFF-delay timer, switchable either effective or ineffective. [Timer period:1 ms, 5 ms, 10 ms, 20 ms, 40 ms, 50 ms, 100 ms, 500 ms, 1,000 ms]				
	nt emitting amo	ount selection	Incorporated / Switchable either effective or ineffective				
	erference preve	ention	Incorporated Emission frequency se (Functions at emission	lection method (Note 2) frequency 1, 2 or 3)	Incorporated Emission frequency selection method (Note 2) (Functions at emission frequency 1, 2, 3 or 4)		
nce	Ambient temp	perature		°F (If 4 to 7 units are mounted clos °F) (No dew condensation or icing			
ental resistance	Ambient hum	idity			rage: 35 to 85 % RH		
al re	Ambient illum	inance		Incandescent light: 3,000 &	x at the light-receiving face		
	Voltage withs	tandability	1,000 V AC for 0	one min. between all supply term	ninals connected together and en	nclosure (Note 3)	
Environm	Insulation res	istance	20 MΩ, or more, with 25	50 V DC megger between all sup	ply terminals connected togethe	er and enclosure (Note 3)	
Envi	Vibration resi	stance	10 to 150 Hz fre	equency, 0.75 mm 0.030 in ampl	itude in X, Y and Z directions for	r two hours each	
	Shock resista	ince	98 m/s	² acceleration (10 G approx.) in 2	X, Y and Z directions for five tim	es each	
Emi	itting element ((modulated)		Red LED (Peak emission	on wavelength : 632 nm)		
Mat	terial		Enclo	sure: Polycarbonate, Key switch	: Polycarbonate, Fiber lock leve	r: PBT	
Cor	nnecting metho	od		Connecto	or (Note 4)		
Cat	ole extension		Total	length up to 100 m 328.084 ft is	possible with 0.3 mm ² , or more,	cable.	
We	ight		Net weight: 15 g approx. Gross weight: 35 g approx.	Net weight: 15 g approx. Gross weight: 75 g approx.	Net weight: 15 g approx. Gross weight: 35 g approx.	Net weight: 15 g approx. Gross weight: 75 g approx.	
Acc	cessory			CN-14A-C2 (Connector attached cable, 2 m 6.562 ft long):1pc.		CN-14A-C2 (Connector attached cable, 2 m 6.562 ft long):1pc.	

- Notes: 1) Where measurement conditions have not been specified precisely, the conditions used were ambient temperature + 23 °C + 73.4 °F.

 2) When using the interference prevention function, set the emission frequencies for the amplifiers to be covered by the interference prevention function to different frequency values.

 However, the interference prevention function does not operate at emission frequency 0 (factory default setting) for the FX-101(P)(-Z) / FX-101(P)-CC2.

 3) The voltage withstandability and the insulation resistance values given in the above table are for the amplifier only.

 4) Connector attached cable CN-14A-C2 is not attached to the models that have no '-CC2' at the end of the model Nos.


 - - Make sure to use the optional connector attached cable CN-14A-C or the connector CN-14A. Model Nos. having the suffix '-Z' are M8 plug-in connector type. Make sure to use the optional M8 plug-in connector cable CN-24A-C.



■I/O CIRCUIT AND WIRING DIAGRAMS

FX-10 (-Z/-CC2) NPN output type

I/O circuit diagram

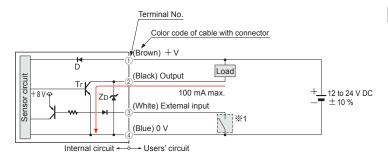

Symbols ... D : Reverse supply polarity protection diode ZD: Surge absorption zener diode Tr : NPN output transistor


Non-voltage contact or NPN open-collector transistor

or

High (+8 V to +V DC or open): Ineffective
Low [(0 to +2 V DC (source current 0.5 mA or less)] : Effective


Terminal arrangement diagram

Connector type



Terminal No.	Function
1	+ V
2	Output
3	External input
4	0 V


M8 plug-in connector type



Terminal No.	Function
1)	+ V
2	Output
3	External input
4	0 V


FX-10 P(-Z/-CC2)

I/O circuit diagram

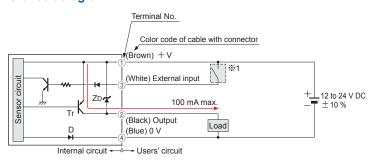


Symbols ... D : Reverse supply polarity protection diode Zb: Surge absorption zener diode Tr : PNP output transistor

%1




Terminal arrangement diagram

Connector type



Terminal No.	Function
1	+ V
2	Output
3	External input
4	0 V

M8 plug-in connector type



Terminal No.	Function
1)	+ V
2	Output
3	External input
4	0 V

Pliable fibers (flexible and sharp bending fibers) are marked with light blue in the table.

Thru-beam type (one pair set) Fiber cable Sensing range (mm in)(Note) Bending Shape of fiber head length Free-cu Model No. Type (mm in) radius Standard type **FX-101**□ Long sensing range type **FX-102**□ Lens mountable M4 400 15.748 FT-B8 1,150 45.276 R25 mm Lens mountable R0.984 in FT-FM2 Sleeve 90 mm 3.543 in Fiber **→**□□□□□ 800 31.496 FT-FM2S 300 11.811 R25 mm 2 m 6.562 ft ϕ 1.48 ϕ 0.058 R0.984 in Sleeve Sleeve 40 mm 1.575 in 1.575 In M4 R10 mm R0.394 ir FT-FM2S4 ϕ 1.48 ϕ 0. ₹ Lens mountable M4 650 25.591 FT-W8 260 10.236 Lens mountable 230 9.055 650 25.591 FT-P80 Flexible Lens mountable M4 1 m R10 mm R0.394 ir FT-P81X 260 10.236 800 31.496 3.281 ft Tough flexible **≯**
2 m Lens mountable M4 **-**m(1)00 130 5.118 300 11.811 FT-P60 6.562 ft Flexible M4 Threaded type 570 22.441 215 8.465 W7 × H9 × D13.9 FT-WR80 **≫** 2 m With lens N 6.562 ft • 4 430 16.929 1,150 45.276 FT-WR80L W7×H9×D14.6 Lens mountable Elbow M4 * R25 mm 430 16.929 FT-R80 180 7.087 2 m R0.984 in 6.562 ft Lens mountable (except FX-LE2) M3 FT-T80 800 31.496 300 11.811 R25 mm R0.984 in FT-NFM2 Sleeve 90 mm 3 543 ir Fiber M3 130 5.118 R25 mm FT-NFM2S 280 11.024 **≫** 2 m $\phi 0.88 \phi 0.035$ R0 984 in Sleeve Sleeve 40 mm 1.575 in 6.562 ft M3 FT-NFM2S4 φ 0.88 φ 0.0 M3 80 3.150 220 8.661 FT-W4 80 3.150 FT-P40 allh) din. 240 9.449 Flexible With lens M14 R25 mm 9,300 366.141 15,000 590.550 FT-FM10L R0.984 in 32.808 f


Note: Please take care that the sensing range of the free-cut type fiber may be reduced by 20 % max. depending upon how the fiber is cut.

Thru-beam type (one pair set) Sensing range (mm in)(Note) Fiber cable Bending Shape of fiber head Туре length Free-cu Model No. (mm in) radius Standard type **FX-101**□ Long sensing range type **FX-102**□ With lens • Long sensing range ϕ 3 ϕ 0.118 600 23.622 1,500 59.055 FT-WS8L **≫** 2 m R1 mm 6.562 ft φ3 φ3 φ0.118 FT-WS3 150 5.906 600 23,622 With lens • Long sensing range $\phi 2.5 \phi 0.0$ 2,400 94.488 FT-SFM2L 760 29.921 R25 mm **≫** 2 m FT-SFM2 800 31.496 300 11.811 6.562 ft φ2.5 φ0.098 650 25.591 FT-WS8 260 10.236 R25 mm φ 1.5 φ 0.059 130 5.118 280 11.024 FT-SNFM2 * 2 m 6.562 ft φ1.5 <u>φ</u>0.059 R1 mm 220 8.661 FT-WS4 80 3.150 12 Cylindrical type φ 1.5 φ 0.059 1 m 3.281 ft 120 4.724 330 12.992 FT-P2 R4 mm Flexible φ1 φ0.039 500 mm 90 3.543 40 1.575 FT-PS1 19.685 ii 9 φ0.25 φ3 ϕ 0.125 mm ϕ 0.005 in 500 mm 19 0.748 FT-E12 6 0.236 19.685 ir Sleeve part cannot be bent. Beam diameter φ0.4 φ3 1 m 3.281 ft 15 0.591 60 2.362 FT-E22 Sleeve part cannot be bent. 2,350 92.520 FT-V10 1,000 39.370 **≫** 2 m 6.562 ft φ2.5 <mark>φ</mark>0.0 FT-SFM2SV2 180 7.087 470 18.504 R25 mm Sleeve part cannot be bent. 1 m 0.6 φ2 FT-V22 140 5.512 380 14.961 3.281 ft Sleeve part cannot be bent. 0.6 0.024 φ2.5 **φ**0.09 120 4.724 FT-V41 40 1.575 **≫** 2 m Sleeve part cannot be bent. 6.562 ft FT-WV42 20.079 30 1.181 80 3.150 Sleeve part cannot be bent.

Note: Please take care that the sensing range of the free-cut type fiber may be reduced by 20 % max. depending upon how the fiber is cut.

Thru-beam type (one pair set) Sensing range (mm in)(Note 1) Fiber cable Bending Shape of fiber head length Free-cut Model No. Type (mm in) radius Standard type **FX-101**□ Long sensing range type **FX-102**□ Easy mounting • Top sensing $W3 \times H8 \times D12$ 1,200 47.244 2,800 110.236 FT-WZ8H W0.118×H0.315×D0.472 0 0 3,100 122.047 FT-Z8H 1,400 55.118 Flexible Easy mounting • Side sensing $W3 \times H12 \times D8$ 700 27.559 2,100 82.677 FT-WZ8E **≯**
2 m /0 118 × H0 472 × D0 315 6.562 ft R4 mm 800 31.496 FT-Z8E 1.850 72.835 Flexible Easy mounting • Front sensing 330 12.992 950 37.402 FT-WZ8 Rectangular $W8.5 \times H12 \times D3$ Compact 0.335 × H0.472 × D0.118 R4 mm 360 14.173 1,000 39.370 FT-Z8 Flexible Front sensing 670 26.378 230 9 055 $W10 \times H7 \times D2$ FT-WZ4 **≯**< Fiber bending type 3.281 ft W2×H10×D10 W0.079×H0.394×D0.394 80 3.150 230 9.055 FT-WZ4HB 8 R1 mm R0.039 ir Front sensing 330 12.992 1,000 39.370 $\sqrt{\text{W14} \times \text{H7}} \times \text{D3.5}$ FT-WZ7 **≫** 2 m W0.551 × H0.276 × D0.138 Fiber bending type W3.5×H14×D11 W0.138×H0.55 6.562 ft 190 7.480 580 22.835 FT-WZ7HB P φ3.5 R25 mm 1,000 39.370 3,000 118.110 FT-K8 R0.984 in Side-view type with small light dispersion beam 700 27.559 2,200 86.614 FT-WKV8 **≫** 2 m Narrow 6.562 ft R25 mm 3,000 118.110 FT-KV8 1,000 39.370 R0.984 in W2 × H1.5 × D20 W0.079 × H0.059 × D0 FT-KV1 135 5.315 500 19.685 Wide area sensing FT-WA30 Sensing width 32 mm 1.260 in Special (Note 2) 3,500 137.795 (Note 2) 3,500 137.795 W5×H69×D20 beam FT-A30 Wide Wide area sensing 6.562 ft FT-WA8 1,500 59.055 (Note 2) 3,500 137.795 W4.2 × H31 × D13.5 FT-A8 Top sensing W5×H15×D15 W0.197×H0.591×D0.59 280 11.024 720 28.346 FT-AFM2 Array R25 mm 2 m Side sensing R0.984 in 240 9.449 670 26.378 FT-AFM2E W5 X H15 X D15

Notes: 1) Please take care that the sensing range of the free-cut type fiber may be reduced by 20 % max. depending upon how the fiber is cut. 2) The fiber cable length practically limits the sensing range to 3,500 mm 137.795 in long.

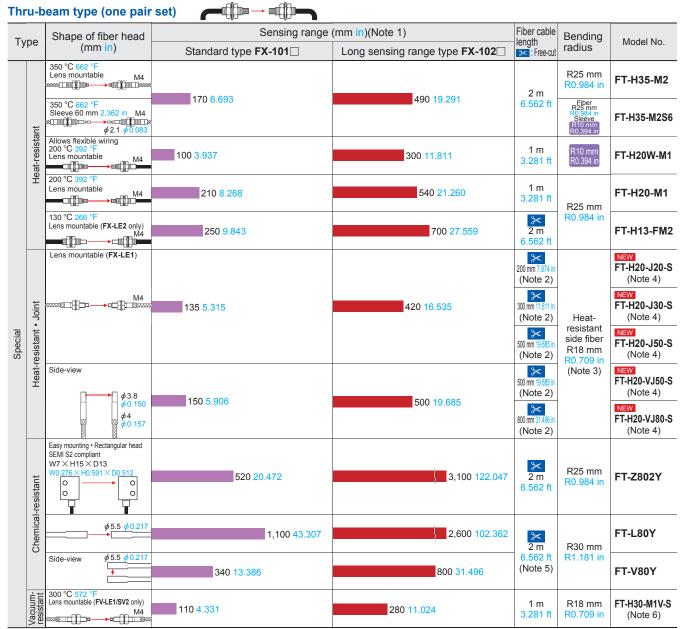

Notes: 1) Please take care that the sensing range of the free-cut type fiber may be reduced by 20 % max. depending upon how the fiber is cut.

- 2) This is the fiber length (fixed length) for heat-resistant side fibers. The ordinary-temperature side fibers are free-cut to 2 m 6.562 ft. 3) The ordinary-temperature side fiber is R25 mm R0.984 in or more.
- 4) Heat-resistant joint fibers and ordinary-temperature side fibers (FT-FM2) are sold as a set. Please refer to 'Heat-resistant joint fiber catalog' for details.
- 5) The allowable cutting range is 500 mm 19.685 in from the end that the amplifier inserted.
 6) Sold as a set comprising vacuum-resistant type fiber + photo-terminal (FV-BR1) + fiber at atmospheric side (FT-J8). Please refer to 'Vacuum-resistant fiber catalog' for details.

Model No. when ordering heat-resistant joint fibers individually as replacement parts


- FT-H20-J20 (one pair set)
- FT-H20-J30 (one pair set)
- FT-H20-J50 (one pair set)

- FT-H20-VJ50 (one pair set)
- FT-H20-VJ80 (one pair set)

Model No. when ordering vacuum-resistant fibers individually as replacement parts

- · Vacuum-resistant type fiber FT-H30-M1V (one pair set)
- Photo-terminal FV-BR1 (one pair set)
- · Fiber at atmospheric side FT-J8 (one pair set)

Pliable fibers (flexible and sharp bending fibers) are marked with light blue in the table.

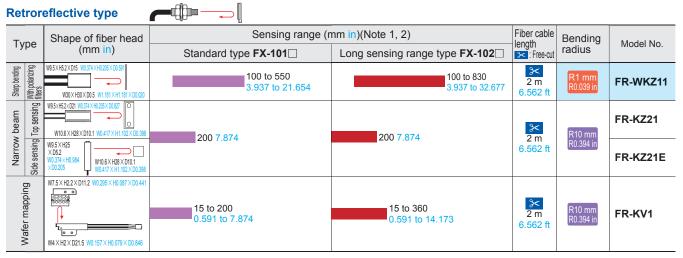

Notes: 1) Please take care that the sensing range of the free-cut type fiber may be reduced by 20 % max. depending upon how the fiber is cut.

The sensing range of FR-WKZ11 is specified for the RF-13. The sensing range of FR-KZ21, FR-KZ21E and FR-KV1 is specified for the attached reflector.


The sensing ranges when using in combination with the FR-WKZ11 reflector (optional) are given in the below table.

Reflector	FX-101□	FX-102□			
FR-WKZ11+RF-210	100 to 700 3.937 to 27.559	100 to 1,100 3.937 to 43.307			
FR-WKZ11+RF-220	100 to 1,300 3.937 to 51.181	100 to 2,600 3.937 to 102.362			
FR-WKZ11+RF-230	100 to 2,000 3.937 to 78.740	100 to 4,000 3.937 to 157.480			

²⁾ The sensing range of FR-WKZ11 is the possible setting range for the reflector or reflective tape. The fiber can detect an object less than 100 mm 3.937 in away. However, note that if there are any white or highly-reflective surfaces near the fiber head, reflected incident light may affect the fiber head. If this occurs, adjust the threshold value of the amplifier unit before use.

The sensing range of FR-KZ21(E) is the possible setting range for the reflector. However, if setting the fiber to detect objects passing within 0 to 20 mm 0 to 0.787 in from the fiber head, unstable detection may result.


The sensing range of FR-KV1 is the possible setting range for the reflector. The fiber can detect an object less than 15 mm 0.591 in away.

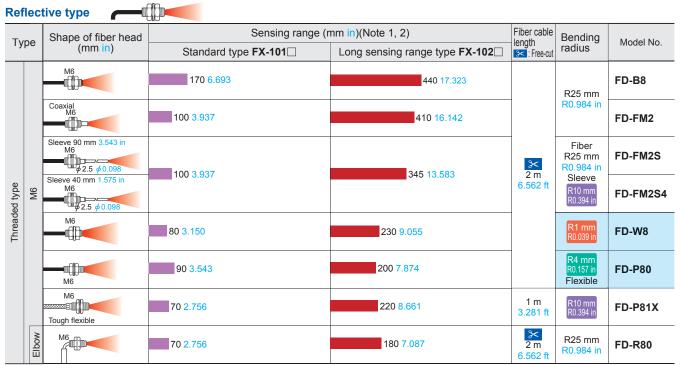

Notes: 1) The sensing range is specified for white non-glossy paper ($400 \times 400 \text{ mm } 15.748 \times 15.748 \text{ in}$) as the object.

²⁾ Please take care that the sensing range of the free-cut type fiber may be reduced by 20 % max. depending upon how the fiber is cut.

Pliable fibers (flexible and sharp bending fibers) are marked with light blue in the table.

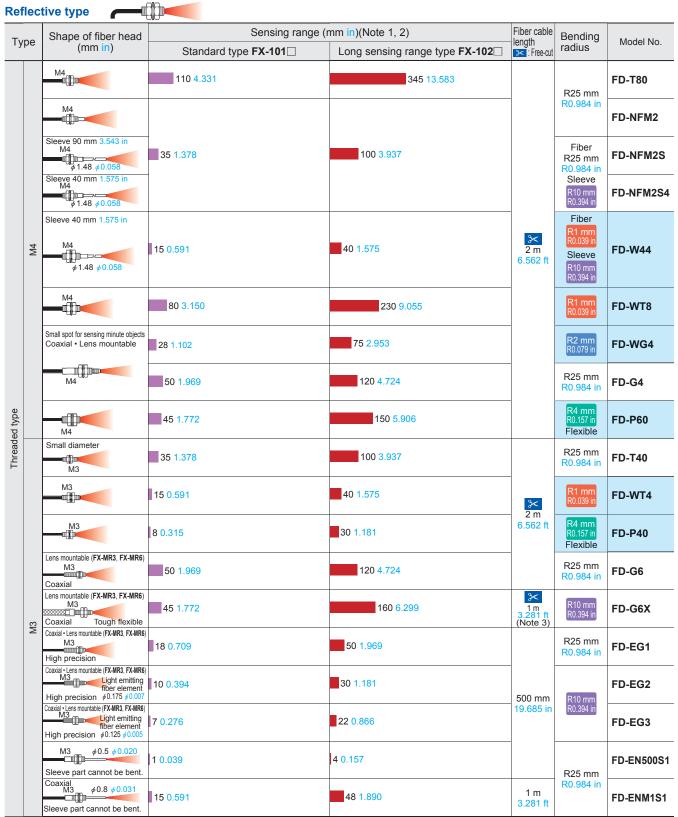

Notes: 1) The sensing range is specified for white non-glossy paper [200×200 mm 7.874×7.874 in (FD-T80, FD-WT8: 400×400 mm 15.748×15.748 in, FD-W44, FD-WT4, FD-P40, FD-G6, FD-EG1, FD-EG3, FD-ER3, FD-EN500S1, FD-ENM1S1: 100×100 mm 3.937×3.937 in)] as the object.

2) Please take care that the sensing range of the free-cut type fiber may be reduced by 20 % max. depending upon how the fiber is cut.

3) The allowable cutting range is 700 mm 27.559 in from the end that the amplifier inserted.




Pliable fibers (flexible and sharp bending fibers) are marked with light blue in the table.

Туре		Shape of fiber head	Sensing rang	e (mm in)(Note 1, 2)	Fiber cable length	Bending	Model No.
Ιyμ	е	(mm in)	Standard type FX-101 □	Long sensing range type FX-102 □	Free-cut	radius	Model No.
		φ3 φ0.118	100 3.937	345 13.583		R25 mm R0.984 in	FD-S80
	φ0.118	¢3 ¢0.118	80 3.150	230 9.055	*	R1 mm R0.039 in	FD-WS8
	φ3 φ(¢3 ¢0.118	28 1.102	75 2.953	6.562 ft	R2 mm R0.079 in	FD-WSG4
		φ3 φ0.118	45 1.772	150 5.906		R4 mm R0.157 in Flexible	FD-P50
	\$2.5 \$0.098	φ2.5 φ0.098	35 1.378	100 3.937	2 m 6.562 ft	R25 mm R0.984 in	FD-SNFM2
Cylindrical type	$\phi 1.5$	<i>ϕ</i> 1.5 <i>ϕ</i> 0.059	25 0.984	65 2.559	1 m 3.281 ft	R4 mm R0.157 in Flexible	FD-P2
Ś	Ultra-small diameter		3.5 0.138	13 0.512	1 m	R10 mm R0.394 in	FD-E12
	Ultra-smal	Coaxial $\phi 3 \phi 0.118$ $\phi 0.65 \phi 0.026$ Sleeve part cannot be bent.	16 0.630	45 1.772	3.281 ft	R25 mm R0.984 in	FD-E22
Work of it		Small diameter $\frac{41.5}{60.059}$ $\frac{40.059}{0.028}$ Sleeve part cannot be bent.	25 0.984	70 2.756		R25 mm R0.984 in	FD-V41
	Side-view	#3 #2 #0.118 #0.079 Sleeve part cannot be bent.	6 0.236	20 0.787	2 m 6.562 ft	R1 mm R0.039 in	FD-WV42
	••	$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	30 1.181	90 3.543		R25 mm R0.984 in	FD-SFM2S\
		Glass substrate detection • Mapping © © W25 × H7.3 × D30 W0.984 × H0.287 × D1.181	16 to 30 0.630 to 1.181	12 to 50 0.472 to 1.969	4 m 13.123 ft	R25 mm R0.984 in	FD-L46
		Glass substrate detection • Alignment W20 × H29 × D3.8 W0.787 × H1.142 × D0.150	0 to 40 0 to 1.575	0 to 50 0 to 1.969	3 m 9.843 ft	R4 mm	FD-L45
		Glass substrate detection • Alignment O O W17 × H29 × D3.8 W0669 × H1.142 × D0.150	0 to 19 0 to 0.748	0 to 25 0 to 0.984	2 m 6.562 ft	R0.157 in	FD-L43
		Glass substrate detection • Seating confirmation	0 to 6 0 to 0.236	0 to 8 0 to 0.315	≫ 2 m	R10 mm	FD-L44
		W12 × H19 × D3 W0.472 × H0.748 × D0.118	0 to 4.5 0 to 0.177	0 to 5.5 0 to 0.217	6.562 ft	R0.394 in	FD-L44S
Converg	Convergent	Glass substrate detection	7 to 12 0.276 to 0.472 (Convergent point 8 0.315)	6 to 13.5 0.236 to 0.531 (Convergent point 8 0.315)		R1 mm R0.039 in	FD-WL41
		W24 × H21 × D4 W0.945 × H0.827 × D0.157	3 to 14 0.118 to 0.551 (Convergent point 8 0.315)	1.5 to 16 0.059 to 0.630 (Convergent point 8 0.315)	2 m 6.562 ft	R10 mm	FD-L41
		W6×H18×D14 W0.236×H0.709×D0.551	5 to 8 0.197 to 0.315 (Convergent point 6 0.236)	1 to 17 0.039 to 0.669 (Convergent point 6 0.236)		R0.394 in	FD-L4
		₩7.2 × H7.5 × D2	1 to 4.5 0.039 to 0.177	0.5 to 6.5 0.020 to 0.256	1 m 3.281 ft	R1 mm R0.039 in	FD-WL48


Notes: 1) The sensing range is specified for white non-glossy paper (FD-S80, FD-WS8: 400×400 mm 15.748×15.748 in, FD-WSG4, FD-P50, FD-SNFM2, FD-V41, FD-SFM2SV2: 200×200 mm 7.874×7.874 in, FD-P2, FD-E12, FD-E22, FD-W42, FD-L4, FD-WL48: $100 \times 100 \times 100$ mm $3.937 \times 3.937 \times 10.028$ in R edge of LCD glass substrates, FD-L43, FD-L44 and FD-L45: $100 \times 100 \times 10.028 \times 10.028$ in LCD glass substrates, FD-L44S: silicon wafers polished surface, FD-WL41, FD-L41: $100 \times 100 \times 12.028 \times 10.028 \times 10.$



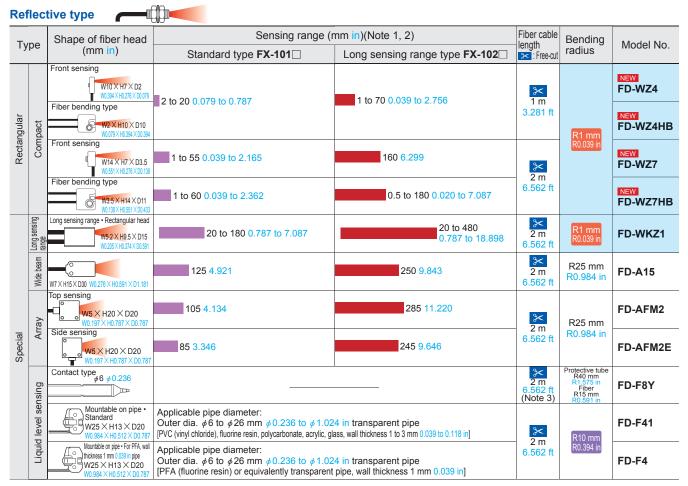

Notes: 1) The sensing range is specified for white non-glossy paper [$200 \times 200 \text{ mm } 7.874 \times 7.874 \text{ in } (\text{FD-WKZ1}, \text{FD-AFM2E}: 400 \times 400 \text{ mm } 15.478 \times 15.478 \text{ in})$] as the object.

- 2) Please take care that the sensing range of the free-cut type fiber may be reduced by 20 % max. depending upon how the fiber is cut.
- 3) The allowable cutting range is 1,000 mm 39.370 in from the end that the amplifier inserted.

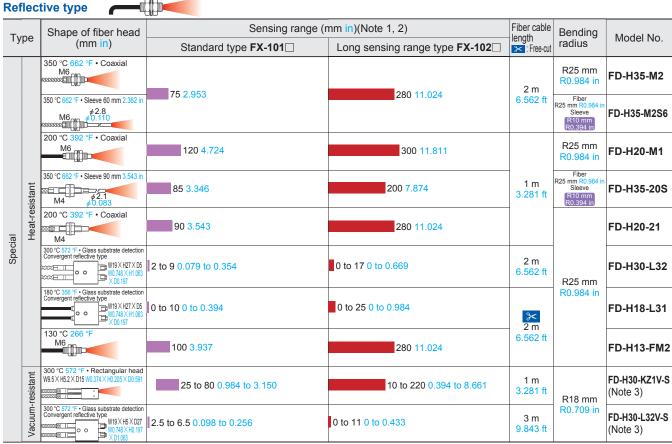

Notes: 1) The sensing range is specified for white non-glossy paper [$400 \times 400 \text{ mm } 15.748 \times 15.748 \text{ in } (\text{FD-H30-L32, FD-H18-L31}: 50 \times 50 \text{ mm } 1.969 \times 1.969 \text{ in glass substrate, FD-H30-KZ1V-S, FD-H30-L32V-S}: <math>100 \times 100 \times 10.7 \text{ mm } 3.937 \times 3.937 \times 10.028 \text{ in transparent glass)}]$ as the object.

2) Please take care that the sensing range of the free-cut type fiber may be reduced by 20 % max. depending upon how the fiber is cut.

• RF-003

3) Sold as a set comprising vacuum-resistant type fiber + photo-terminal (FV-BR1) + fiber at atmospheric side (FT-J8).

Model No. when ordering vacuum-resistant fibers individually as replacement parts

· Vacuum-resistant type fiber FD-H30-KZ1V FD-H30-L32V




 Photo-terminal FV-BR1 (one pair set)

• RF-13

· Fiber at atmospheric side FT-J8 (one pair set)

FX-CT2

Accessories (attached with fibers)

RF-003 (FR-KZ21/KZ21E exclusive reflector)

RF-13 (Reflective tape)

FX-CT1 (Fiber cutter)

FX-CT2 (Fiber cutter)

FX-AT2 (Attachment for fixed-length fiber, Orange)

FX-AT3 (Attachment for $\phi 2.2$ mm $\phi 0.087$ in fiber, Clear orange) **FX-AT4** (Attachment for $\phi 1$ mm $\phi 0.039$ in fiber, Black)

FX-AT5 (Attachment for $\phi 1.3 \text{ mm } \phi 0.051 \text{ in fiber, Gray})$

FX-AT6 (Attachment for $\phi 1 \text{ mm } \phi 0.039 \text{ in } / \phi 1.3 \text{ mm } \phi 0.051 \text{ in mixed fiber, Black / Gray)}$


If connecting to a fiber amplifier other than the FX-100 series

Applicable fiber amplifiers: FX2 / FX3 series

FX-AT10 (Attachment for ϕ 1 mm ϕ 0.039 in fiber)

FX-AT13 (Attachment for $\phi 1.3 \text{ mm } \phi 0.051 \text{ in fiber}$)

FX-AT15 (Attachment for ϕ 1 mm ϕ 0.039 in / ϕ 1.3 mm ϕ 0.051 in mixed fiber)

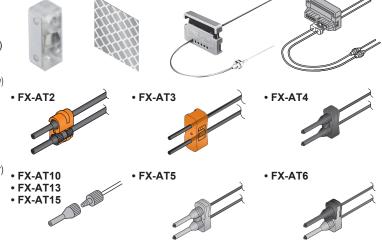

• FX-CT1



FIBER OPTIONS

Lens (For thru-beam type fiber)

D	esignation	Model No.		Description			
				Increases the sensing range by 5 times or more.	Sensing range (mm) [Le	ens on both sides]	
				range by a minor or more.	Fiber	FX-101□	FX-102□
				Ambient temperature:	FT-B8	2,200	3,500 (Note 2)
				-60 to +350 °C	FT-FM2, FT-T80	3,000	3,500 (Note 2)
	Expansion		_	-76 to +662 °F	FT-R80	1,900	3,500 (Note 2)
	lens	FX-LE1		70 10 1 002 1	FT-W8	3,000	3,500 (Note 2)
	(Note 1)		7 2		FT-P80, FT-P60	3,500 (Note 2)	3,500 (Note 2)
	(INOLE I)				FT-P81X	1,600 (Note 2)	1,600 (Note 2)
					FT-H35-M2	2,000 (NOW 2)	3,500 (Note 2)
					FT-H20W-M1	1,300	1,600 (Note 2)
					FT-H20-M1	1,600 (Note 2)	1,600 (Note 2)
					FT-H20-J20-S, FT-H20-J30-S, FT-H20-J50-S	1,000 (Note 2)	3,500 (Note 2)
					[[] - []	1,000	3,300 (Note 2)
				Tremendously increases the	Sensing range (mm) [Le	ens on both sides]	
	Cunar			sensing range with large diameter lenses.	Amplifier	FX-101□	FX-102□
	Super-				FT-B8, FT-FM2, FT-R80, FT-W8, FT-P80, FT-P60	3,500 (Note 2)	3,500 (Note 2)
<u>.</u>	expansion	FX-LE2		Ambient temperature:	FT-P81X	1,600 (Note 2)	1,600 (Note 2)
<u> </u>	lens	I X-LLZ		-60 to +350 °C	FT-H35-M2	3,500 (Note 2)	3,500 (Note 2)
5	(Note 1)				FT-H20W-M1, FT-H20-M1	1,600 (Note 2)	1,600 (Note 2)
<u> </u>	,			-76 to +662 °F	FT-H13-FM2	3,500 (Note 2)	3,500 (Note 2)
- I					FT-H20-J20-S, FT-H20-J30-S, FT-H20-J50-S	3,500 (Note 2)	3,500 (Note 2)
ק מ						.,,	,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,,
<u> </u>				Beam axis is bent by 90 °.	Sensing range (mm) [Lens on both sides]		
-or tnru-beam type nber				Ambient temperature:	Amplifier	FX-101□	FX-102□
<u> </u>				─ 60 to +300 °C	FT-B8	530	1,450
-			AT D	−76 to +572 °F	FT-FM2, FT-T80	550	1,700
	Side-view				FT-W8	450	1,300
		FX-SV1			FT-P80	420	1,400
	lens		1		FT-P60	300	850
			ST D		FT-P81X	550	1,700
					FT-H35-M2	280	800
					FT-H20W-M1	140	400
					FT-H20-M1	280	840
					FT-H20-J20-S, FT-H20-J30-S, FT-H20-J50-S	150	410
	Expansion		470	Sensing range increases by	Sensing range (mm) [Le	ens on both sides] (Note 3)
	lens for vacuum- resistant fiber	FV-LE1		4 times or more. • Ambient temperature:	Amplifier	FX-101□	FX-102□
	(Note 1)		The state of the s	$-40 \text{ to } + 120 ^{\circ}\text{C} - 40 \text{ to} + 248 ^{\circ}$		450	1,600
	Side-view			Beam axis is bent by 90 °.	Sensing range (mm) [Le	ens on both sides] (Note 3)
	lens for vacuum-	FX-SV2	() A	Ambient temperature:	Amplifier	FX-101□	FX-102□
	resistant fiber		S 100	$-60 \text{ to } +300 ^{\circ}\text{C} -140 \text{ to} +572 ^{\circ}$		450	1,600

Notes: 1) Be careful when installing the thru-beam type fiber equipped with the expansion lens, as the beam envelope becomes narrow and alignment is difficult. Especially when installing a fiber with many cores (sharp bending fibers and heat-resistant glass fiber), please be sure to use it only after you have adjusted it sufficiently.

2) The fiber cable length practically limits the sensing range to 3,500 mm 137.795 in long (FT-H20W-M1, FT-P81X and FT-H20-M1: 1,600 mm 62.992 in).

3) The fiber cable length for the FT-H30-M1V is 1m 3.281 ft. The sensing ranges in FX-102 (long sensing range type) take into account the length of the FT-J8 atmospheric side fiber.

Lens (For reflective type fiber)

Lens	Lens (For reflective type fiber)								
	Designation	Model No.		Description					
	Pinpoint spot lens	FX-MR1	Pinpoint spot of ϕ 0.5 mm ϕ 0.020 in. Enables detection of minute objects or small marks. • Distance to focal point: 6 ± 1 mm 0.236 \pm 0.039 in • Applicable fibers: FD-WG4 , FD-O • Ambient temperature: -40 to $+70$ °C -40 to $+158$ °F						
			Screw-in ↓	The spot diameter is adjustable from ϕ 0.7 mm	Sensing range	for FX-101□ (No	ite)		
			depth T	to $\phi 2 \text{ mm } \phi 0.028 \text{ in to } \phi 0.079 \text{ in according to how much the fiber is screwed in.}$	Screw-in depth	Distance to focal point	Spot diameter		
	Zoom lens	FX-MR2	<u> </u>	Applicable fibers: FD-WG4, FD-G4	7 mm	18.5 mm approx.	φ0.7 mm		
			Distance to	• Ambient temperature: -40 to +70 °C -40 to +158 °F	12 mm	27 mm approx.	φ1.2 mm		
			focal point ↓ Spot	Accessory: MS-EX-3 (mounting bracket)	14 mm	43 mm approx	φ2.0 mm		
ē		FX-MR3	→ ← diameter	Extremely fine spot of \$0.3 mm \$0.012 in \$0.01	Sensing range	for FX-101□ (No	ite)		
월	Finest spot lens FX-			approx. achieved.	Fiber model No.	Distance to focal point	Spot diameter		
For reflective type fiber			Distance to focal point	FD-EG1, FD-EG2, FD-EG3, FD-G6X, FD-G6	FD-EG3	7.5 ± 0.5 mm			
e 1					FD-EG2	7.5 ± 0.5 mm			
Ę.				Ambient temperature:	FD-EG1	7.5 ± 0.5 mm			
<u> </u>				Extremely fine spot of $_{\phi}0.1$ mm $_{\phi}0.004$ in approx. achieved. • Applicable fibers: FD-WG4 , FD-G4 ,	FD-WG4/G4/G6X/G6	7.5 ± 0.5 mm	ϕ 0.5 mm approx.		
<u>e</u>					Sensing range for FX-101□ (Note)				
Į.		FX-MR6			Fiber model No.	Distance to focal point	Spot diameter		
	Finest spot				FD-EG3	$7.5 \pm 0.5 \text{ mm}$	ϕ 0.1 mm approx.		
	lens			FD-EG1, FD-EG2, FD-EG3, FD-G6X, FD-G6 • Ambient temperature:	FD-EG2	7.5 ± 0.5 mm	ϕ 0.15 mm approx.		
				-20 to +60 °C -4 to +140 °F	FD-EG1	7.5 ± 0.5 mm	φ0.2 mm approx.		
			County in double	20 10 1 00 C 4 10 1 140 1	FD-WG4/G4/G6X/G6	7.5 ± 0.5 mm			
			Screw-in depth-> -	FX-MR2 is converted into a side-view type	Sensing range	for FX-101□ (No	te)		
	Zoom lens			and can be mounted in a very small space.	Screw-in depth	Distance to focal point	Spot diameter		
	/Side-view\	FX-MR5	Distance	Applicable fibers: FD-WG4, FD-G4	8 mm	13 mm approx.	φ0.5 mm		
	(type		to focal point	Ambient temperature:	10 mm	15 mm approx.	φ0.8 mm		
	, ,		· •	$-40 \text{ to} + 70 ^{\circ}\text{C} -40 ^{\circ}\text{to} + 158 ^{\circ}\text{F}$	14 mm	30 mm approx	ø3.0 mm		
			⇒i- Spot diameter						

Note: The sensing ranges are the values when used in combination with FX-101 (standard type). Please contact our office for details on sensing ranges for other types of amplifier.



FIBER OPTIONS

Others

Designation	Model No.	Description				
Protective tube (For thru-beam) (type fiber	FTP-500 (0.5 m 1.640 ft)	F	Applicable fibers	FT-B8 FT-P80		
	FTP-1000 (1 m 3.281 ft)	For M4 thread		FT-FM2 FT-FM2S FT-H13-FM2	FT-P60 FT-FM2S4	
	FTP-1500 (1.5 m 4.921 ft)					The protective tube, made of non-corrosive stainless steel, protects the inner fiber cable from any
	FTP-N500 (0.5 m 1.640 ft)	For M3 thread		FT-T80 FT-NFM2 FT-NFM2S	FT-P40	
	FTP-N1000 (1 m 3.281 ft)				S FD-P40	
	FTP-N1500 (1.5 m 4.921 ft)			FT-NFM2S		
Protective tube (For reflective) (type fiber	FDP-500 (0.5 m 1.640 ft)	For M6 thread		FD-B8	FD-P80 fiber cable from an external forces.	
	FDP-1000 (1 m 3.281 ft)			FD-FM2 FD-FM2S		
	FDP-1500 (1.5 m 4.921 ft)			FD-FM2S4		
	FDP-N500 (0.5 m 1.640 ft)	For M4 thread		FD-T80 FD-NFM2 FD-NFM2S		
	FDP-N1000 (1 m 3.281 ft)				S	
	FDP-N1500 (1.5 m 4.921 ft)	uneau		FD-NFM2	34	
Fiber bender	FB-1	The fiber bender bends the sleeve part of the fiber head at the proper radius. (Note 1)				
Universal sensor mounting stand (Note 2)	MS-AJ1-F	Horizontal mounting type			Mounting stand assembly for fiber (For M3, M4 or M6 threaded head fiber)	
	MS-AJ2-F					
Fiber cutter	FX-CT2	The free-cut type fiber can be easily cut. Accessory. FX-CT1 is attached with the FT-P80 or the FD-P80. The FX-CT2 is provided with fibers other than this.				
	FX-CT1					
Attachment for fixed-length fiber	FX-AT2	This is the attachment for the fixed length fiber. Orange. (Accessory)				
Attachment for $\phi 2.2$ mm $\phi 0.087$ in fiber	FX-AT3	This is the attachment for the $\phi 2.2$ mm $\phi 0.087$ in fiber. Clear Orange. (Accessory. Does not attach with the FT-P80 or the FD-P80 .)				
Attachment for ϕ 1 mm ϕ 0.039 in fiber	FX-AT4	This is the attachment for the ϕ 1 mm ϕ 0.039 in fiber. Black. (Accessory)				
Attachment for ϕ 1.3 mm ϕ 0.051 in fiber	FX-AT5	This is the attachment for the ϕ 1.3 mm ϕ 0.051 in fiber. Gray. (Accessory)				
Attachment for ϕ 1 mm ϕ 0.039 in / ϕ 1.3 mm ϕ 0.051 in mixed fiber	FX-AT6	This is the attachment for the ϕ 1 mm ϕ 0.039 in / ϕ 1.3 mm ϕ 0.051 in mixed fiber. Black / Gray. (Accessory)				

Notes: 1) Do not bend the sleeve part of any side-view type fiber or ultra-small diameter head type fiber.

2) Refer to the 'Sensor general catalog 2003-2004' or the SUNX website: http://www.sunx.jp/ for universal sensor mounting stand.


Protective tube • FTP• FDP Fiber bender • FB-1






Universal sensor mounting stand

Using the arm which enables adjustment in the horizontal direction, sensing can also be done from above an assembly line.

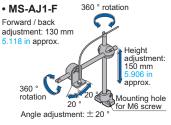



Angle adjustment: ± 20

Fiber attachment

It's possible to simultaneously cut two fibers to the same length

Each fiber (with some exceptions) has a newly developed two-in-one fiber attachment (**FX-AT3/AT4/AT5/AT6**) which enables two fibers to be cut simultaneously to the same length with the new fiber cutter (**FX-CT2**). Also, since the fibers can be attached to the amplifier while being fixed in position in the two-in-one fiber attachment, sensitivity changes resulting from variation in the amount of fiber insertion do not occur.
















■PRECAUTIONS FOR PROPER USE




Never use this product as a sensing device for personnel protection.


In case of using sensing devices for personnel protection, use products which meet regulations and standards, such as OSHA, ANSI or IEC etc., for personnel protection applicable in each region or country.






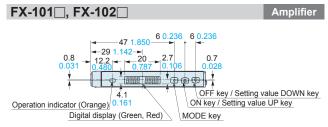

Assembly dimensions with optional protective cover

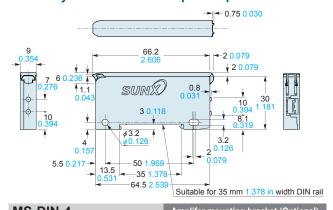


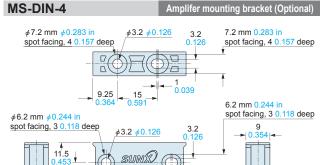

0.039 24.5 35

Material: PBT

FX-101(P)-Z, FX-102(P)-Z Amplifier **--** 29 1.142 → 12.2 8.0 0.480 **‡**0.7 0.028 Operation indicator (Orange) OFF key / Setting value DOWN key 4.1 ON key / Setting value UP key Digital display (Green, Red) MODE key 1.1 0.043 0.039 \$\frac{\phi 6.5}{\phi 0.256}\$ SUNX þ 10 30 10 φ3.2 φ0.126 3.2 -50 1.969 -35 1.<mark>378</mark> 64.5 2.539 Suitable for 35 mm 1.378 in width DIN rail

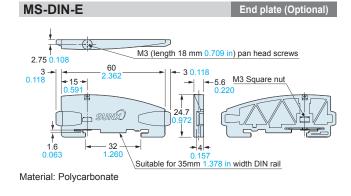


CN-14A-C

¥

0.157

Connector attached cable (Optional) CN-14A-C2 is attached FX-101(P)-CC2 / FX-102(P)-CC2



• Length L					
Model No.	Length L (mm in)				
CN-14A-C1	1,000 39.370				
CN-14A-C2	2,000 78.740				
CN-14A-C3	3,000 118.110				
CN-14A-C5	5,000 196.850				

All information is subject to change without prior notice.



SUNX Limited

2431-1 Ushiyama-cho, Kasugai-shi, Aichi, 486-0901, Japan Phone: +81-(0)568-33-7211

FAX: +81-(0)568-33-2631

Overseas Sales Dept. http://www.sunx.jp/

Phone: +81-(0)568-33-7861 FAX: +81-(0)568-33-8591